

## ➔ Introduction:

Skype™ is free Internet telephony, provided by Skype Technologies S.A., that offers the people PC-to-PC (free) and PC-to-Phone (pretty cheap) calls all over the world with the superior quality voice via its next-generation peer-to-peer software.


With MobileSkyfree, you can enjoy the Skype™ service like the regular phone calls.






You can learn about the latest product information and/or download the latest driver for Skype from the web-site [www.voip-skyfree.com.tw](http://www.voip-skyfree.com.tw).

 
## ➔ Features:

- ▣ Operate Skype™/SkypeOut™ calls with full keypad functions and ringing on incoming calls.
- ▣ Built-in sound card and driver supporting USB Ver. 1.1 with USB HID and USB Audio allows use as speaker/microphone for any internet telephony software.
- ▣ Full duplex and echo-free communication
- ▣ Crystal clear sound quality
- ▣ No external power required
- ▣ Enjoy internet phone calls like using the regular phone.
- ▣ Easy to use

## ➔ Specifications:

- ▣ One USB connector to PC
- ▣ Key-in tone function
- ▣ 3-line LCD display showing time/date/month/year/dialing numbers/phone status/caller ID/call records
- ▣ Keypad functions:
  - ▣ **IN**: Review the call-in numbers.  
You can press “IN” button to review the call-in numbers with the time and date. Press “IN” button repeatedly to review the call-in numbers from the latest to the earliest round by round. While you are reviewing, you can double-click “C” button to delete this number or press SEND key  to call out.
  - ▣ **OUT**: Review the call-out numbers.  
The usage is as the same as the “IN” button.
  - ▣ **▲**: UP
    - (1) Review the call-in/out numbers from the earliest to the latest.
    - (2) Move up the light bar on the Skype windows.

- ▣ ▼: DOWN
  - (1) Review call-in/out numbers from the latest to the earliest.
  - (2) Move down the light bar on the Skype windows.
- ▣ C: Clear phone number/wrong input number, Change the Skype Tab, Close the Skype sub-windows.
  - (1) Double click to delete call-in/out number while you are reviewing **IN/OUT** call records.
  - (2) Delete the wrong input number while you are dialing.
  - (3) Change the Tab in the Skype main windows.
  - (4) Close the appearing sub-windows such as “Not a valid number”.
- ▣  : Dial out/Answer a call, Redial
  - (1) Input the wanted phone number, then press  to make the call.
  - (2) When the USB Phone is ringing on an incoming call, press  to answer the call.
  - (3) Redial the last called number at the addressbar in Skype windows.
- ▣  : Hang up, Close the Skype windows.
  - (1) When you want to end a call or refuse a call, press  to hang up.
  - (2) Close the Skype windows anytime.

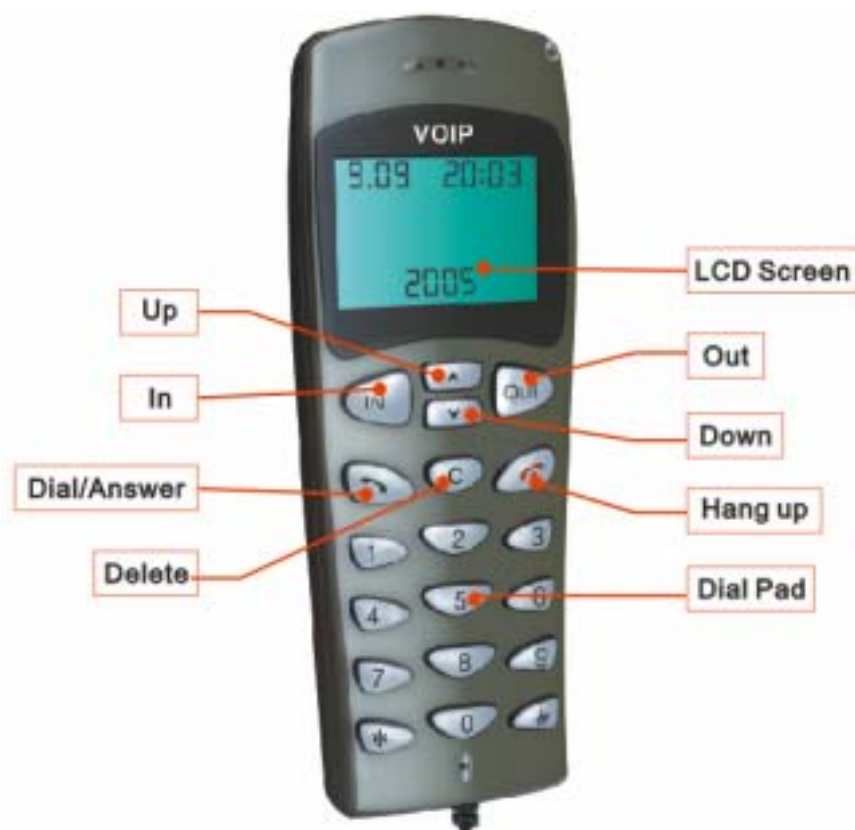

**Remarks: Except for the Hang Up key, the Skype™ windows will pop up as you press any key on the phone.**

## ➔ System Requirements:

- ❑ Windows 98SE/ME/2000/XP
- ❑ Pentium II 233MHz or Higher
- ❑ RAM 32MB or Higher
- ❑ Free USB Port
- ❑ Available Internet Connection

## ➔ How to Work with Skype™:

### Run Skype

- ❑ Download Skype software and install it ([www.skype.com](http://www.skype.com)), the version must be 1.0.0.106 or higher.
- ❑ Run Skype and log in with Skype account.




You can create a Skype account as shown below:



After the software startup, the icon will appear to the system tray as shown below:



That indicates the Skype has successfully connected to Internet.

 
If it hasn't connected to Internet, the icon will be shown as , now you have to check whether PC is connected to Internet successfully or not.

### Connect USB Phone to PC

- Connect USB Phone to PC, the LCD shows "VOIP- Phone".

### Run Skyfree on the CD

- Install the driver Skyfree from the CD enclosed in the package.  
The Skype program will pop up the window as shown below:

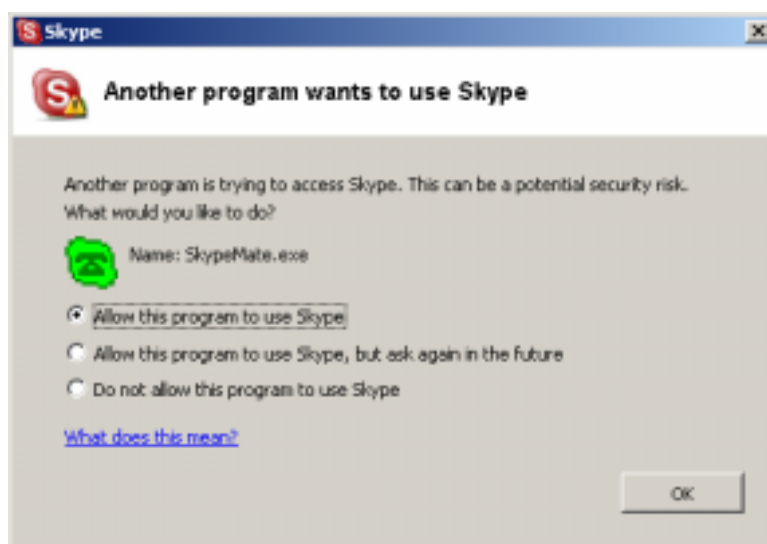

Select the first item "Allow this program to use Skype", click "OK" button.

**Note:** If you selected the wrong item, you can execute "File->Options->

Privacy-> Manage other programs' access to Skype->Change->OK" to open the window as above to make the correct selection again.

After running Skyfree, the icon will appear to the system tray as shown below:




That indicates the device and Skype are connected successfully.



If the icon is shown as , please run Skype first.

If the icon is shown as , it means USB Phone is connected incorrectly, please reconnect USB Phone to PC.


### Call another Skype user (PC to PC)

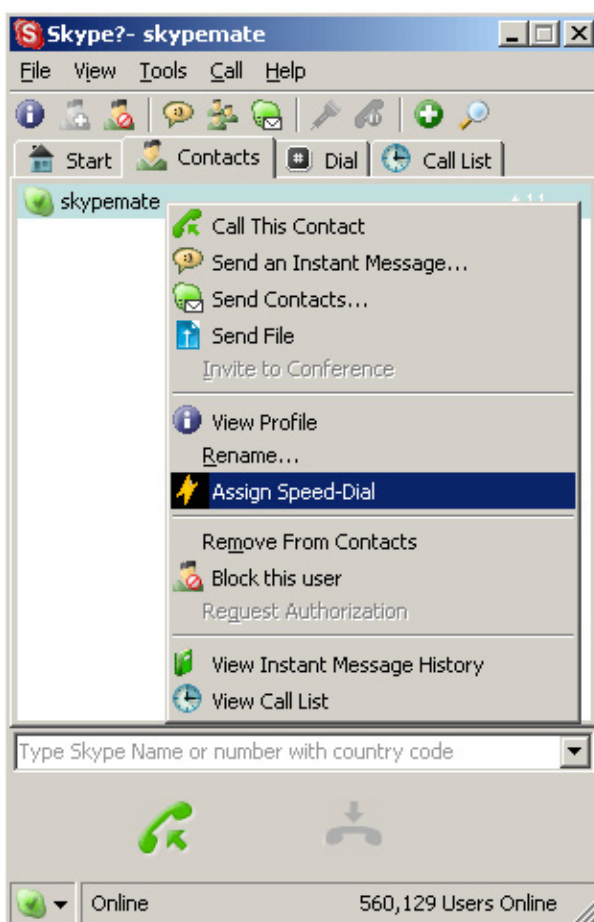 - ▣ Add a Skype mate to Contacts
- ▣ Assign Speed-Dial for it, for example "11"



- ▣ Input the number and call out:  
Press digital "1" and "1" on USB Phone, this number will be shown on the addressbar in Skype window, then press SEND key  to call out.
- ▣ You also can press C key to change the Tab in Skype window to Contacts, and then use the Up/Down key to move the light bar to the person you want to call.  
Press SEND key  on USB Phone to call out.



**Call to regular phone (PC to Phone)**

- ▣ Press "00"+"country number"+"phone number", then press .
- For Example: call to Taipei, Taiwan, press 00886212345678, then press SEND key.


00886	2	12345678
-----	-----	-----
country code	city code	telephone number

**Note:** If you want to use this function, you should buy SkypeOut Credit first.

### Answer a call

When the USB Phone is ringing on an incoming call, press  to answer the call, or press  to refuse the call.

### Adjust options (Volume and Ringer)

Double-click the  on the taskbar, then you can adjust the volume and ringer.

 
## ➔ FAQ:

### Problem 1

The voice is coming through the PC's sound card instead of the USB phone when I make/answer a Skype call.

#### Resolution

Open the main window of Skype, click on "File->Options", and go to the table **Hand/headsets**, set **Audio In**, **Audio Out** and **Ringin**g all to the **USB Audio Device**.

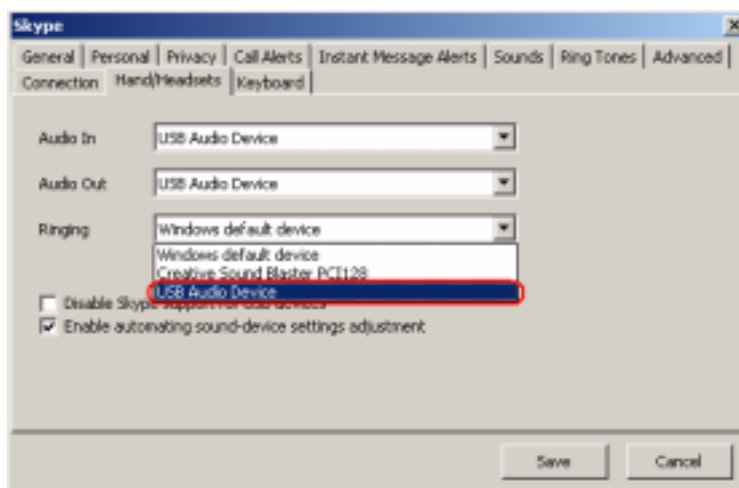


### Problem 2

There is no voice coming out of speakers when playing music.

#### Resolution

 Please execute the "Control Panel->Sound and Video ()->Audio", set **Sound Playback** and **Sound Recording**'s Preferred device to your sound card, it's shown as below:

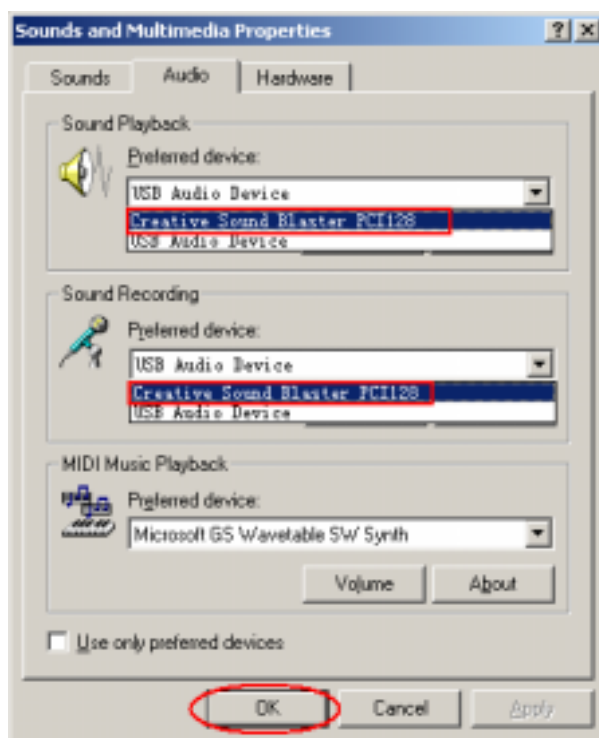

### **Problem 3**

Skype has been startup, but the icon of Skyfree still is shown as .

### **Resolution**

Maybe you selected the wrong item, you can execute "File->Options->Privacy-> Manage other programs' access to Skype->Change->OK" to open the window as below, and select "Allow this program to use Skype".

